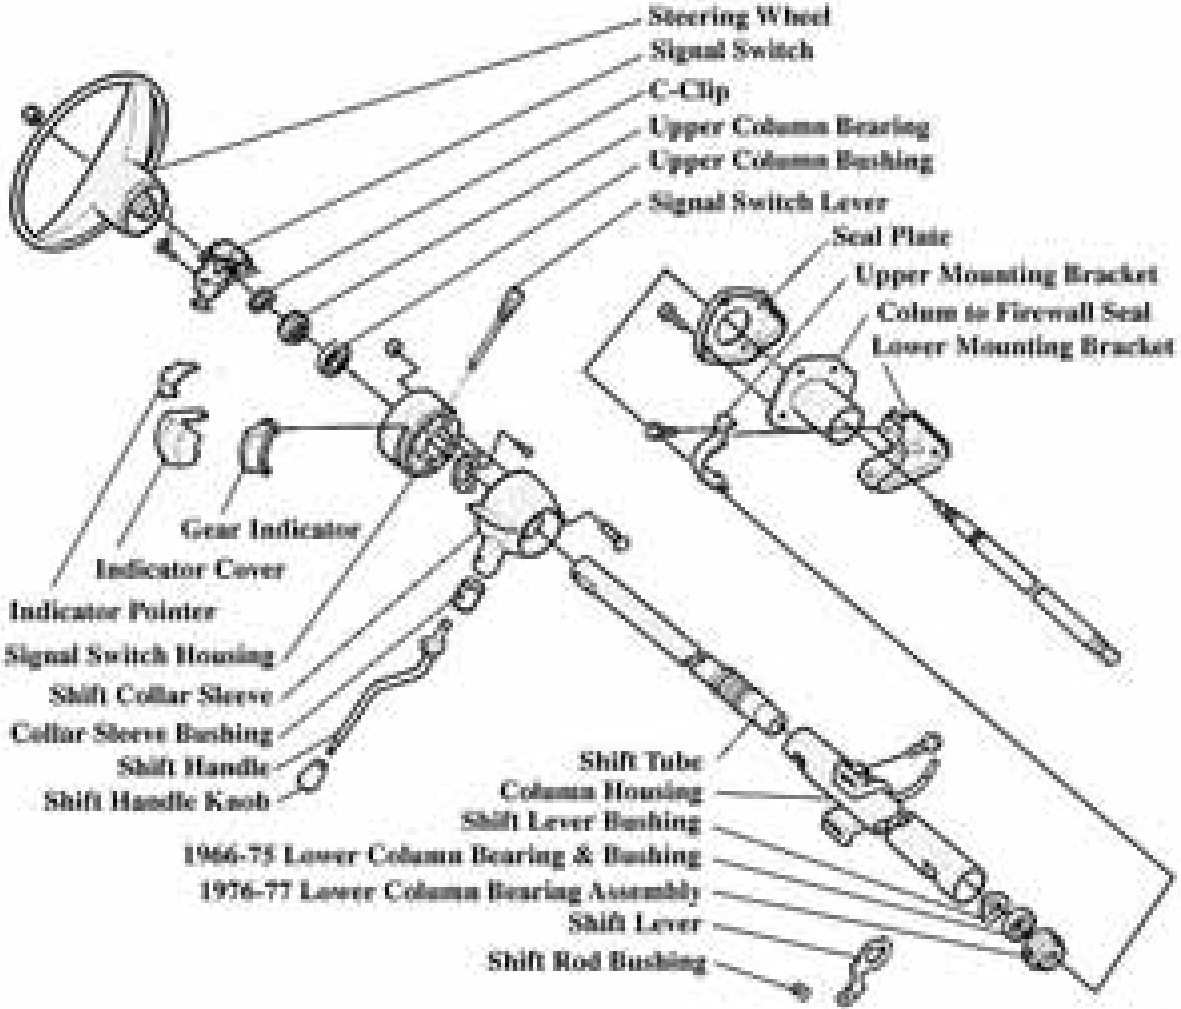
Steering Wheel
Signal Switch
C-Clip
Upper Column Bearing
Upper Column Bushing
Signal Switch Lever
Seal Plate
Upper Mounting Bracket
Colum to Firewall Seal
Lower Mounting Bracket
Gear Indicator
Indicator Cover
Indicator Pointer
Signal Switch Housing
Shift Collar Sleeve
Collar Sleeve Bushing
Shift Handle
Shift Handle Knob
Shift Tube
Column Housing
Shift Lever Bushing
1966-75 Lower Column Bearing & Bushing
1976-77 Lower Column Bearing Assembly
Shift Lever
Shift Rod Bushing